

Hamaton

How to Read a TPMS Sensor with the Hybrid HT Tool



Choose CHECK SENSOR on the main menu



Select the vehicle's MAKE



Select the vehicle's MODEL



Select the vehicle's
YEAR OF MANUFACTURER



Select the number of wheels
(if applicable)



Place the tool on the sidewall near the valve



Press the green trigger button



The tool will display the sensor's ID, battery status
and frequency besides the tyre's pressure
and temperature